

## SECTION 2


### DESTINATION SEARCH

#### Destination search

● Quick reference ("Destination" screen)	39
● Destination search	40
Selecting the region to search .....	40
Destination search by Home .....	42
Destination search by Quick access .....	42
Destination search by "Address" .....	43
Destination search by "POI*" .....	46
Destination search by "Phone #" .....	53
Destination search by "Emergency" .....	53
Destination search by "Memory" .....	54
Destination search by "Previous" .....	54
Destination search by "Map" .....	55
Destination search by "Intersection" .....	56
Destination search by "Freeway Ent./Exit" .....	57
Destination search by "Coordinates" .....	58
Deleting set destinations .....	58
● Starting route guidance	60

\*: Point of Interest

## Quick reference (“Destination” screen)

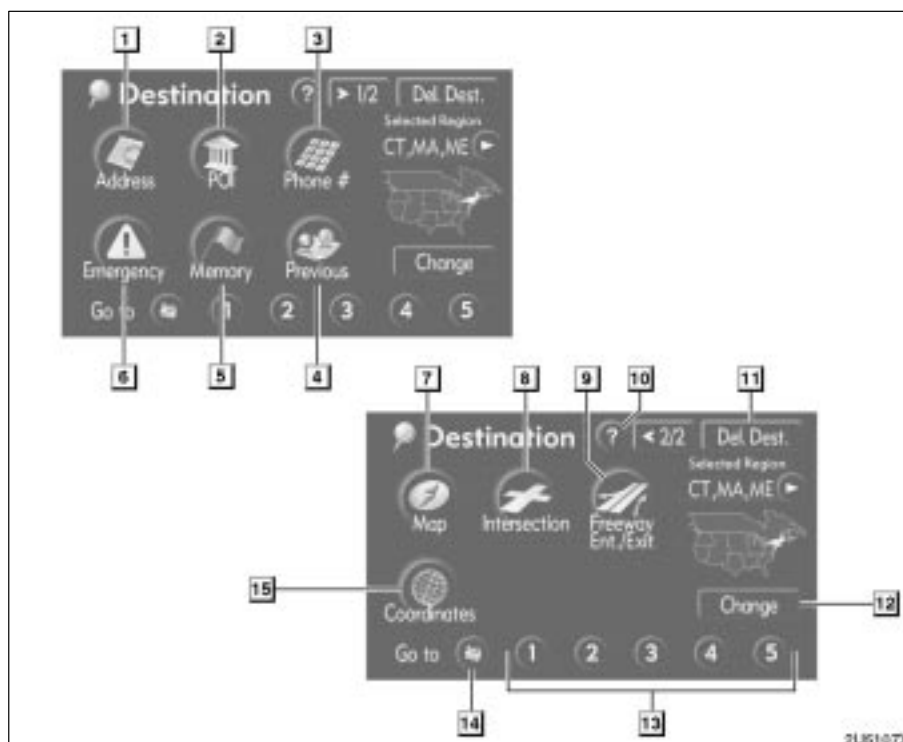

### 1 “Address”

A house number and the street address can be input by using the input keys. .... 43

### 2 “POI”

Select one of the many POIs (Points of Interest) that have already been stored in the system’s database. .... 46

### 3 “Phone #”

A destination can be entered by the telephone number. .... 53

### 4 “Previous”

A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. .... 54

### 5 “Memory”

The location can be selected from the registered “Memory points”. (To register memory points, see “ — Registering memory points” on page 92.) .... 54

### 6 “Emergency”

One of the four categories of emergency service points that are already stored in the system’s database can be selected. .... 53

### 7 “Map”

A destination can be selected simply by touching the location on the displayed map. .... 55

### 8 “Intersection”

The names of two intersecting streets can be entered. This is helpful if only the general vicinity, not the specific address, is known. .... 56

- 9

**“Freeway Ent./Exit”**  
The name of a freeway (interstate) entrance or exit can be entered. . . . . 57
- 10

**“?”**  
Function help for the “Destination” screen can be viewed on this screen. . . . . 26
- 11

**“Del. Dest.”**  
Set destinations can be deleted . . . . . 58
- 12

**“Change”**  
To change the selected region to search, touch this button. . . . . 40
- 13

**Quick access touch-screen buttons**  
One of 5 preset destinations can be selected by touching the screen directly. If a quick access point has not been registered, a message will be displayed and will automatically switch to the setting screen. To use this function, it is necessary to set the “Quick Access” for each memory point. (To register a “Quick Access”, see “ — Editing memory points” on page 93.) . . . . . 42
- 14

**Home touch-screen button**  
A personal home address can be selected without entering the address each time. If home has not been registered, a message will be displayed and will automatically switch to the setting screen. To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see “ — Registering home” on page 98.) . . . . . 42
- 15

**“Coordinates”**  
A destination can be set by using latitude and longitude as coordinates. . . . . 58

Destination search —



Push the “DEST” button and the “Destination” screen appears.



You can use one of 12 different methods to search your destination. (See pages 42 through 53.)

**INFORMATION**

*When searching the destination, the response to the touch-screen button may be slow.*

## DESTINATION SEARCH


### — Selecting the region to search

#### SELECTING THE REGION TO SEARCH ON THE DESTINATION SCREEN

1. Push the “DEST” button.



2. Touch “Change” on the “Destination” screen to display a map of the United States and Canada divided into 12 regions. (For map database information and updates, see “Map database information and updates” on page 140.)

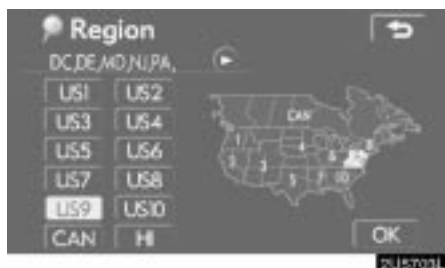

3. Touch one of “US1” through “CAN” to select a region to search.
4. Touch “OK” and the “Destination” screen returns.

#### SELECTING THE REGION TO SEARCH ON THE INPUT SCREEN

Change the selected region in order to set a destination from a different region by using “Address”, “POI”, “Freeway Ent./Exit” or “Intersection”.



1. Touch the region to search button like “US8” on the input screen to display a map of the United States and Canada divided into 12 regions. (For map database information and updates, see “Map database information and updates” on page 140.)



2. Touch one of “US1” through “CAN” to select a region to search.
3. Touch “OK” and the previous screen returns.

## DESTINATION SEARCH

U.S.A.	
Button	States included in the search region
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont

"US9"	Washington, D.C. Delaware Maryland New Jersey Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii

Canada	
Button	Provinces and regions included in the search region
"CAN"	All provinces and regions in Canada included in this button.

## DESTINATION SEARCH

### — Destination search by Home

1. Push the “DEST” button.



2. Touch the home touch-screen button on the “Destination” screen.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 59.)

If home has not been registered, a message will be displayed and will automatically switch to the setting screen.

To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see page 7.)

#### **INFORMATION**

***Guidance starts from the current vehicle position to your home if “Enter” is touched even while driving.***

### — Destination search by Quick access

1. Push the “DEST” button.



2. Touch any of the quick access touch-screen buttons on the “Destination” screen.

The screen changes and displays the map location of the quick access point and the route preference. (See “Starting route guidance” on page 59.)

If a quick access point has not been registered, a message will be displayed and will automatically switch to the setting screen.

To use this function, it is necessary to set “Quick Access” for each memory point. (To register “Quick Access”, see page 9.)

#### **INFORMATION**

***Guidance starts from the current vehicle position to the quick access point if “Enter” is touched even while driving.***

## — Destination search by “Address”

There are 2 ways to input a destination by address.

1. Push the “DEST” button.
2. Touch “Address” on the “Destination” screen.



### (a) Inputting a house number and a street name



1. Touch numbers directly on the screen to input a house number.


After inputting a house number, touch “OK” to display the screen for inputting a street name.

It is possible to input a street name first. Touch “Street” to display the screen for inputting a street name.



2. Input the street name and touch “List”.

## DESTINATION SEARCH

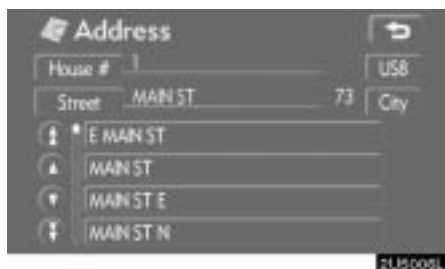

**3. When the desired street name is found, touch the corresponding button.**

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 59.)

If the same address exists in more than one city, the current screen changes to the city list screen.




**4. Select or enter the desired city.**

**"Input Name":** To narrow down the listed items by inputting the city name.



If inputting a street name first, the screen changes. The house number can then be input.

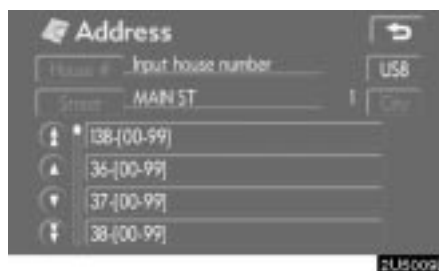


If the above screen appears, an address range on the screen can be selected.



If the same address exists in more than one city, the current screen changes to the city list screen.



(b) Selecting a city to search

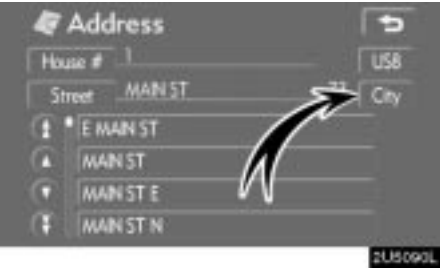

Touch “City”.



To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

INFORMATION

- To change the selected region, touch “Selected Region”.
- To cancel the city setting, touch “Any City”.

INPUTTING THE CITY NAME

1. Touch “Input City Name”.



2. Input a city name.



3. Touch the button of the desired city name from the displayed list.

“Map”: To display the selected destination and the route preference. (See “Starting route guidance” on page 59.)

The current screen changes to the screen for inputting a house number or a street name. (See “(a) Inputting a house number and a street name” on page 43.)

## DESTINATION SEARCH

### SELECTING FROM THE NEAREST 5 CITIES


1. Touch “Nearest 5 Cities”.



2. Touch the button of the desired city name from the displayed list.

The current screen changes to the screen for inputting a house number or a street name. (See “(a) Inputting a house number and a street name” on page 43.)

### SELECTING FROM THE LAST 5 CITIES

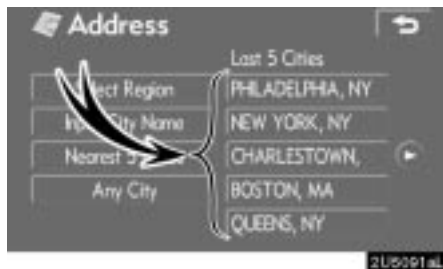

- Touch the button of the desired city name.

If the navigation has not be used, no cities will be displayed on the screen.

The current screen changes to the screen for inputting a house number or a street name. (See “(a) Inputting a house number and a street name” on page 43.)

## — Destination search by “POI”

There are two ways to search by POI (Points of Interest).

- (a) Search by name
- (b) Search by category

1. Push the “DEST” button.
2. Touch “POI” on the “Destination” screen.




3. Touch the button for the desired method.

(a) Search by “Name”




1. Input the name of the Point of Interest.

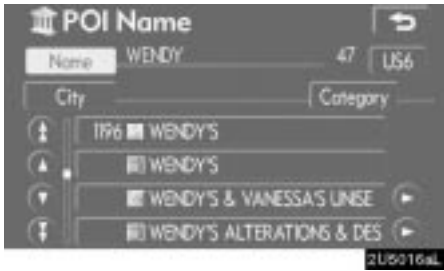

2. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.

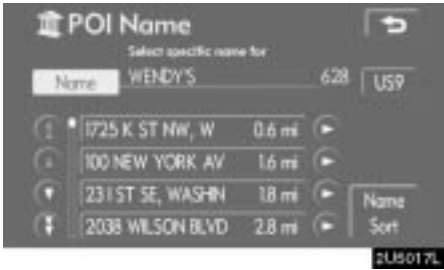

- Touch the button of the desired destination.


If the same name exists in more than one city, a search can be performed more easily with “City” and “Category”. (See “Selecting a city to search” on page 48 and “Selecting from the categories” on page 49.)

**INFORMATION**


*The desired Point of Interest can be displayed on the map screen. (See “Display POI icons” on page 76.)*

## DESTINATION SEARCH

- Selecting a city to search

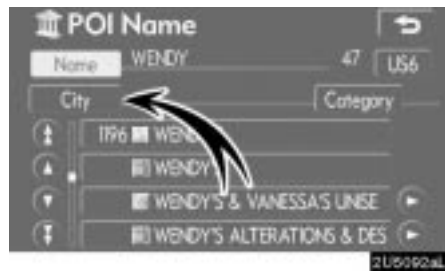

Touch "City".

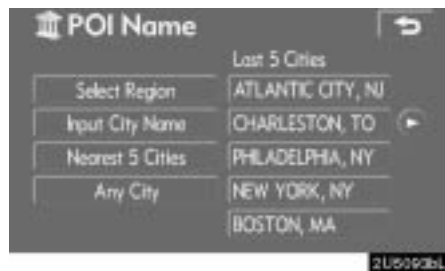

To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

### INFORMATION

- To change the selected region, touch "Select Region".
- To cancel the city setting, touch "Any City".

### INPUTTING THE CITY NAME

1. Touch "Input City Name".




2. Input the city name.



3. Touch the button of the desired city name from the displayed list.

SELECTING FROM THE NEAREST 5 CITIES

1. Touch “Nearest 5 Cities”.

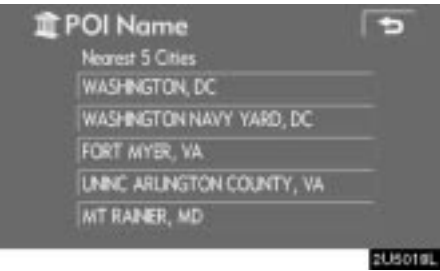

2. Touch the button of the desired city name.


SELECTING FROM THE LAST 5 CITIES



Touch the button of the desired city name.

If the navigation has not be used, no cities will be displayed on the screen.

• Selecting from the categories

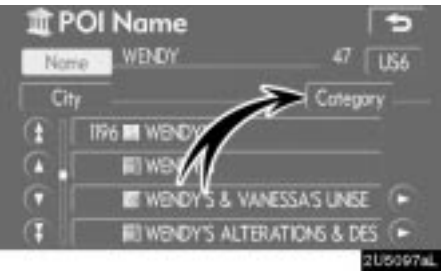


Touch “Category”.



If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.

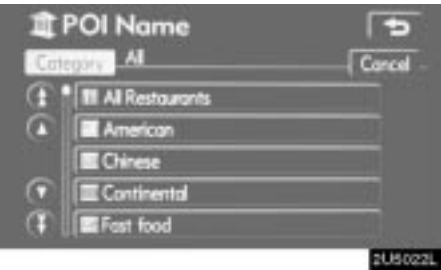

When the desired category is touched, the POI name list screen is displayed.

## DESTINATION SEARCH

### (b) Search by “Category”

The destination can be set by selecting the search point and the POI category.



Set the search point by the following method:

1. Input the city center
2. Set the current position as the search point
3. Set the search point via the map screen
4. Set the search point from any destination

It is possible to display the names of POIs located within approximately 20 miles (32 km) from the selected search point.

### INPUTTING THE CITY CENTER


1. Touch “Input City Center”.



2. Input the city center name.



3. Touch the button of the desired city center name.

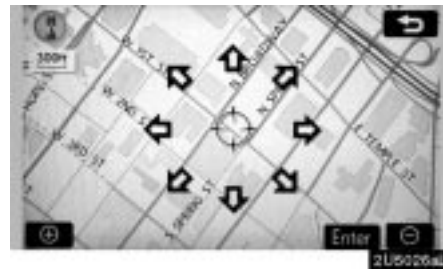

When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling.

4. Touch “Enter”.

The search point is set and the “POI Category” screen will be displayed.


### SETTING THE CURRENT POSITION AS THE SEARCH POINT

#### Touch “Current Position”.

The search point is set at the current position, and the “POI Category” screen will be displayed.

### SETTING THE SEARCH POINT VIA THE MAP SCREEN

#### 1. Touch “Map”.

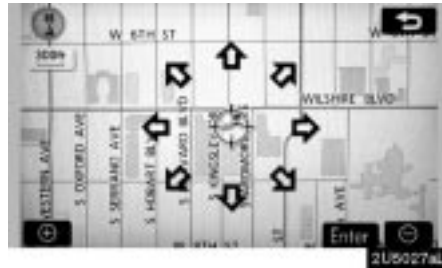

When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling.

#### 2. Touch “Enter”.

The search point is set and the “POI Category” screen will be displayed.

### SETTING THE SEARCH POINT FROM DESTINATIONS

#### 1. Touch the destination buttons at the bottom of the screen.



When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling.

#### 2. Touch “Enter”.

The search point is set and the “POI Category” screen will be displayed.

## DESTINATION SEARCH

- To search POIs near the search point

When the search point is set, the “POI Category” screen will be displayed.



**Select the desired POI categories.**

“**List**”: If the desired POI categories have already been selected, a list of POI will be displayed from among the selected categories.

The selected category icon appears on the top left of the screen.

If the desired POI category is not on the screen, touch “**List All Categories**” to list all POI categories.



**Select the desired POI categories from the list and touch “OK”.**

The selected category icon appears on the top left of the screen.



“**Select Category**”: To return to the POI category selection screen.

“**Show List**”: To display the list of POIs in the selected categories.



By touching the button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

The direction arrows of POIs are displayed only when the current position is set as the search point.

“**On Route**”: When the indicator is illuminated by touching this button, the list of the items searched along the route is displayed.



## — Destination search by “Phone #”

1. Push the “DEST” button.
2. Touch “Phone #” on the second page of the “Destination” screen.



3. Input a telephone number.
4. After inputting a telephone number, touch “OK”.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

If there is more than one site having the same number, the following screen will be displayed.



### INFORMATION

- If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.
- To set a memory point as a destination using the phone number, the number must be registered previously. (See page 97.)

## — Destination search by “Emergency”

1. Push the “DEST” button.
2. Touching “Emergency” on the “Destination” screen.

The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and the longitude at the top of the screen.



3. Touch the desired emergency category.

The selected emergency category list is displayed.



4. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

### INFORMATION

The navigation system does not guide in areas where route guidance is unavailable. (See page 139.)


## DESTINATION SEARCH

---

### — Destination search by “Memory”

1. Push the “DEST” button.
2. Touch “Memory” on the “Destination” screen.

A list of registered memory points is displayed. (To register or edit memory points, see “My places” on page 91.)

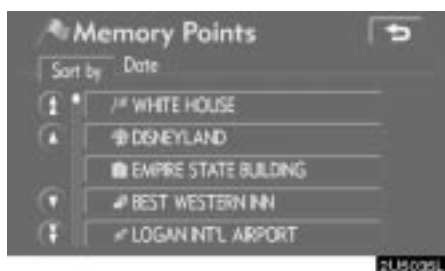


3. Touch the button of your desired memory point.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

### — Destination search by “Previous”

1. Push the “DEST” button.
2. Touch “Previous” on the “Destination” screen.

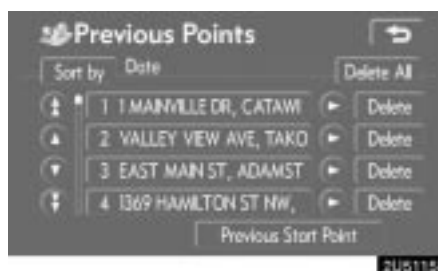

The previous starting point and up to 100 previously set destinations are displayed on the screen.


3. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

● Deleting previous points

1. Touch “Delete” for the previous point button you want to delete.

“Delete All”: To delete all previous points in the system.

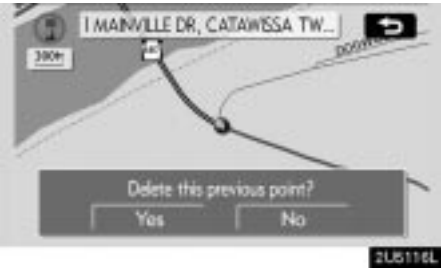

2. To delete the point, touch “Yes”. To cancel the deletion, touch “No”.

<p><b>INFORMATION</b></p> <p><i>The list of previous destinations can also be deleted by touching “Delete Previous Points” on the “My Places” screen when the vehicle is stopped. (See “ — Deleting previous points” on page 103.)</i></p>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

— Destination search by “Map”

1. Push the “DEST” button.
2. Touch “Map” on the second page of the “Destination” screen.



The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 59.)

<p><b>INFORMATION</b></p> <p><i>Guidance starts if “Enter” is touched even while driving. However, the cursor cannot be moved.</i></p>
----------------------------------------------------------------------------------------------------------------------------------------

## DESTINATION SEARCH


---

### — Destination search by “Intersection”

1. Push the “DEST” button.
2. Touch “Intersection” on the second page of the “Destination” screen.




3. Input the name of the two intersecting streets which are located near the destination to be set.

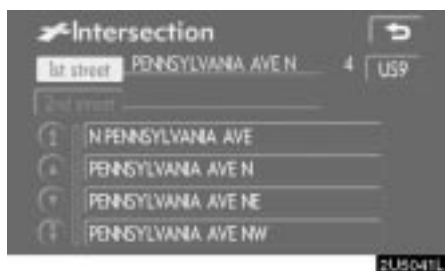

4. Touch the button of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

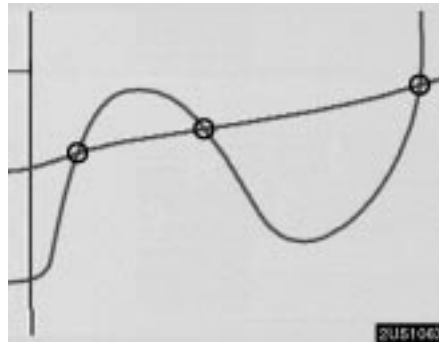

If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

## — Destination search by “Freeway Ent./Exit”

1. Push the “DEST” button.
2. Touch “Freeway Ent./Exit” on the second page of the “Destination” screen.



Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).



3. Select the desired freeway by touching the button.



4. Either a freeway “Entrance” or “Exit” can be selected.



5. Touch the button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

“Input Name”: An applicable list is displayed by touching this button and inputting the name.

### — Destination search by “Coordinates”

1. Push the “DEST” button.
2. Touch “Coordinates” on the second page of the “Destination” screen.



3. Input the latitude and the longitude.
4. When the input is finished, touch “OK”.

By touching the button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

### — Deleting set destinations

A set destination can be deleted.


1. Push the “DEST” button.
2. Touch “Del. Dest.” on the “Destination” screen.

When more than one destination is set, a list will be displayed on the screen.



3. Touch the destination for deletion.

“Delete All”: To delete all destinations on the list.

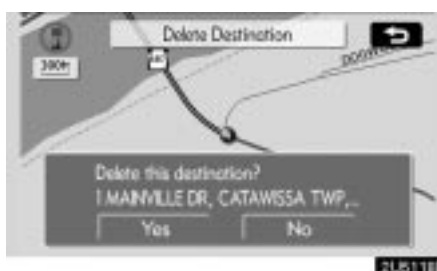

A message appears to confirm the request to delete.

4. To delete the destination(s), touch “Yes”.

If “Yes” is touched, the data cannot be recovered.

If “No” is touched, the previous screen will return.


5. If more than one destination is set, touch “OK” after deleting the destinations.

The system searches for the guidance route again, and displays the entire route.

<b>INFORMATION</b>
<i>Set destinations can also be deleted by touching “Route”. (See “ — Deleting destinations” on page 71.)</i>

Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference.

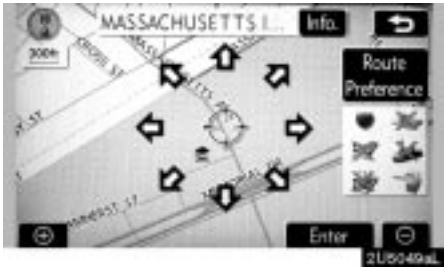

1. When an arrow facing the desired point is touched, the map scrolls in that direction.

Releasing the finger from the arrow will stop the scrolling.

2. Touch “Enter”.

The system starts route search and displays recommended routes.

If there is already a set destination, “Add to Ⓞ” and “Replace Ⓞ” are displayed.

“Add to Ⓞ”: To add a destination.

“Replace Ⓞ”: To delete the existing destinations and set a new one.

“Route Preference”: To change the route preference. (See page 61.)

“Info.”: If this button is displayed on the top of the screen, touch it to view items such as name, address, and phone number.

## DESTINATION SEARCH



- 1 Current position
- 2 Destination point
- 3 Type of the route and the distance
- 4 Distance of the entire route

3. To start guidance, touch "Guide".

**"3 Routes"**: To select the desired route from three possible routes. (See page 61.)

**"Route"**: To change the route. (See pages 70 and 72.)

### INFORMATION

- Guidance can be suspended or resumed. (See "Suspending and resuming guidance" on page 86.)
- If "Guide" is touched until a beep sounds, demo mode will start. Push the "MAP/VOICE" button to finish Demo mode.
- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.
- If a destination is entered, the road nearest to the point you selected is set as the destination.

### CAUTION

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may provide wrong information.



- To change the route before starting guidance

#### ROUTE PREFERENCE



1. You can change route preference by touching "Route Preference".



2. Select the desired route preference by touching the button.

When searching for a route, the system will avoid routes when the indicator is off.

3. After choosing the desired route preference, touch "OK".

#### INFORMATION

- Even if the "Allow Freeway" indicator is dimmed, the route cannot avoid including a freeway in some cases.
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

#### 3 ROUTES SELECTION



1. To select the desired route from three routes, touch "3 Routes".



2. Touch "Quick1", "Quick2" or "Short" to select the desired route.

"Quick1": Recommended route.

This route is indicated by an orange line.

"Quick2": Alternative route.

This route is indicated by a purple line.

"Short": A route by which you can reach the destination in the shortest distance. This route is indicated by a green line.

"Info.": To display the following information about each of the 3 routes.

## DESTINATION SEARCH

---

	Quick1	Quick2	Short
1	7h 59min	9h 36min	7h 58min
2	438 miles	527 miles	435 miles
3	17 miles	67 miles	17 miles
4	434 miles	521 miles	429 miles
5			

2US096aL

- 1 Time necessary for the entire trip
- 2 Distance of the entire trip
- 3 Toll road
- 4 Freeway
- 5 Ferry